



Green Machine Carts Custom Cruiser Extended Top Installation Sheet

- First remove existing top and hardware.
- Set aside 2 of the clamps from original instal to use with new top.
- Use a blanket or carpeted area to Assemble the new top using the supplied Allen bolts/nuts.
- Connect all pieces as shown in Figure 1.
- Remove the 17mm Bolts holding the upper seat belt brackets and lay belt mounts to side.
- With help, set the completed framework on top of cart with curved section overhanging windshield area.
- Now secure the 2 short brackets to where the seatbelt bolts go. As shown in Figure 2.
- Now using the 2 clamps from original top install as shown in figure 3. Use the supplied Allen bolt/nuts.
- Using a drill screw in the supplied self tapping screws into clamp and frame as shown in Figure 4.
- Now lay canvas material over framework, with supplied rope start in the back center eyelet and start threading rope around frame and canvas. Leave an equal gap around canvas and frame. Once threaded around complete frame start pulling rope snug from each eyelet making way around Fram. Tie in back when completed. Canvas should be very taught
- NOTE: IF USING THE FOLD WINDSHIELD YOU WILL NEED TO UN-VELCRO BRACKETS ON WINDSHIELD TO LOWER ENOUGH TO FLIP UP AND DOWN TO CLEAR TOP VISOR.

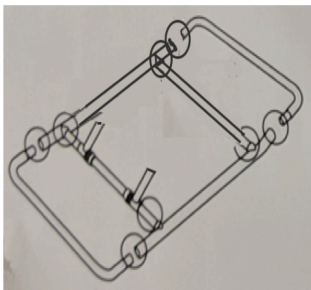


FIGURE 1



FIGURE 2



FIGURE 3



FIGURE 4